

**FEATURE**

1. Stainless Steel Panel with Keypad
2. RFID or Password
3. Level management: master, manager and user.
4. Motorized lock case with integrated installation
5. Door thickness 5-22mm

**APPLICATION**

1. Private drawer, wardrobe and cabinet
2. locker in gym, pool center, school etc.

**Step 1. Mode Selection****1). Public Mode**

- Use a pin (or needle tool) to press reset button
- Music sounds, release the button, the latch retracts into lock case with lock initialized. It's Public Mode.

**2). Individual Mode**

- Use a pin (or needle tool) to press reset button
- Music sounds, keep pressing until the 2<sup>nd</sup> music sounds, the latch stretch out with lock initialized. It's Individual Mode.

**Step 2. Enable Master Code**

- Use a card touch the induction zone
- Four (4) beeps, master card set.

Note:

- ① A lock has only a master card
- ② Master card is used for setting, and can't unlock the door.

**Step 3. Enable / Disable Manager Card and Manager Code****1) Manager Card**

- Use master card touch the induction zone
- Three (3) beeps keypad's backlight flashes, use a new card touch the induction zone
- Four (4) beeps, manager card set.
- Door locked, use manager card touch the induction zone twice
- Music sounds, door unlocked, pull the door open and user card disabled.

**2) Manager Code****I . Enable/Change Manager Code**

- Use master card touch the induction zone
- Three (3) beeps keypad's backlight flashes, press "\*", next enter any 1-8 digit combination, then press "#"
- Four (4) beeps, manager code set or new manager code instead of the old one.
- Door locked, press "\*", next enter manager code, then press "#"
- Door locked, press "\*", next enter manager code, then press "#"
- Music sounds, door unlocked, pull the door open

**II . Delete Manager Code**

- Use master card touch the induction zone
- Three (3) beeps keypad's backlight flashes, press "\*", next enter "0", then press "#"
- Four (4) beeps, manager code deleted.

Note:

- ① A lock can set up five (5) manager card and a manager code.
- ② Manager card and manager code can unlock the door for any emergency. The user card or user code will disable after unlocking by manager card.

**Step 4. Enable / Disable User Card and User Code****1) Public Mode****I . Single Control – User Code**

- Door unlocked and close the door, press "\*", next enter any 1-8 digit combination, then press "#"
- Three (3) beeps, door locked, user code set.
- Press "\*", next enter user code, then press "#"
- Music sounds, door unlocked, pull the door open

**II . Dual Control – User Card + User Code**

- Use manager card touch the induction zone
- Three (3) beeps keypad's backlight flashes, use a new card touch the induction zone
- Four (4) beeps, user card set.
- Door unlocked and close the door, use user card touch the induction zone
- A beep, keypad's backlight flashes, press "\*", next enter any 1-8 digit combination, then press "#"
- Three (3) beeps, door locked, user code set.
- Use user card touch induction zone
- A beep, keypad's backlight flashes, press "\*", next user code, then press "#"
- Music sounds, door unlocked, pull the door open

**2) Individual Mode****I . Single Control – User Card**

- Use manager card touch the induction zone
- Three (3) beeps keypad's backlight flashes, use a new card touch the induction zone
- Four (4) beeps, user card set.
- Door locked, use user card touch induction zone
- Music sounds, door unlocked, pull the door open
- Latch stretch out in 3 sec, push door closed, door locks automatically.

**Function:****1. To Set Up 4 Digit User Code**

- Set up mode
- Press reset button until the 3<sup>rd</sup> music sound, all user code must be 4 digit combination

**2. Wrong Entry Try Penalty**

Consecutive three (3) times invalid code or card, it activates time lock for 30 sec.

**3. Low Battery Warning**

Keypad's backlight flashes with beeps after door unlocked, indicates that battery is low and needs immediate replacement.