

USER MANUAL

PUSH/PULL SMART LOCK

Fingerprint
Password
RFID Card
Emergency Key

REMOTE CONTROL (Optional)

The default password is 1234.
Please change to new password.
Ensure not to use consecutive or repetitive numbers for your safety.

PTMP7150ONTA REV.01

Safety Cautions

- The manual should be read thoroughly before operating the product.
- For security the password should be changed on a regular basis.
- When the batteries are inserted in reverse positions it may result in liquid leakage or rupture.
- When the batteries are flat all the batteries should be replaced.
- Please replace with new batteries do not use used ones to replace.
- Do not install disassemble or repair without the assistance of a product repair technician.
- Use soft and dry cloth to clean the product.
- Do not press or insert the buttons with awls or pins.
- Do not use the product for any purpose other than a digital door lock.
- Do not to let water get into the product.
- This product is a household use, and cannot guarantee normal functioning in any other environment settings.
- Do not subject the product to any severe impact.

Product Specification


Installation condition	Door thickness	40~70mm
Opening method	Password RFID Card Fingerprint	4~12 digits up to 4 passwords may be registered. Up to 100 RFID cards may be registered. Up to 100 fingerprints may be registered.
Rated voltage	DC 6V	LR6 1.5V AA alkaline battery
Emergency power supply	DC 9V	9V Battery (6LF22) (sold separately)
Sensing high temperature	Temperature sensor	72°C±5°C (Laboratory environment) 62°C±5°C (General environment)
Material	Outdoor body Indoor body	Al, Zn, ABS, PC ABS, PC

The contents of this user guide are subject to change without prior notice in order to enhance performance of the product.


Caution

For precaution, please make sure to keep emergency keys outside of the house.

Names of Individual Parts (Outdoor Body)

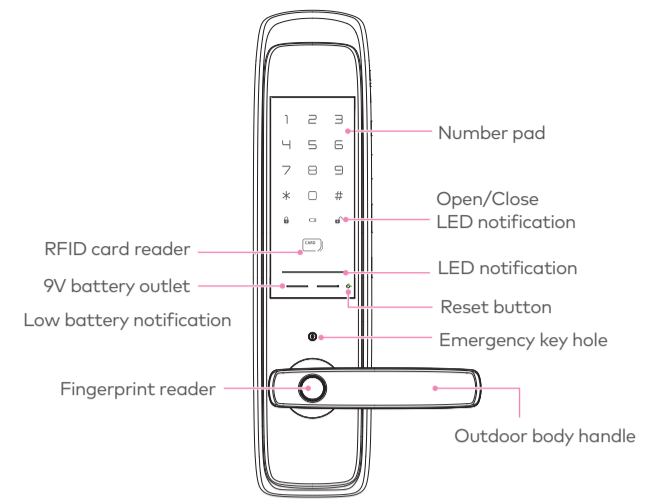

Names of Individual Parts (Indoor Body)

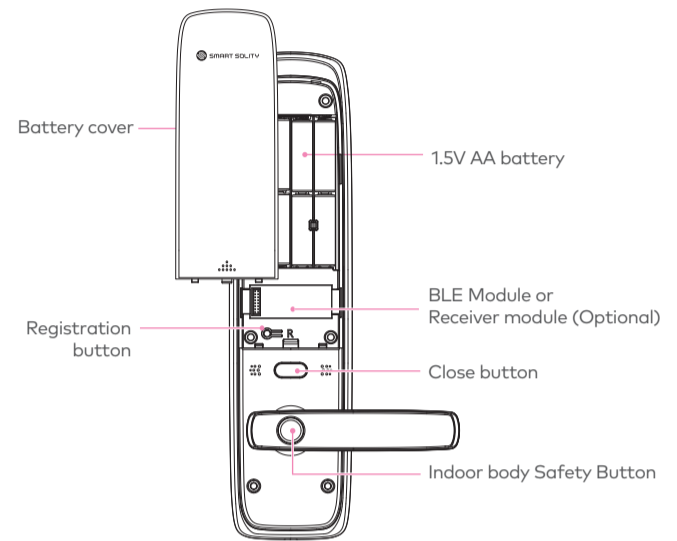

Product Components

* The product components may change depending on the installation environment.

RFID Card	Screws	Mortise
User manual	Emergency key	Mortise shaft
Installation manual	Screws	Mortise shaft fixing pin
Drilling guide	Striker	Dust box
'AA' Batteries (LR6)		

 
Sold separately

BLE module/Smart Bridge Remote control/Receiver module Video door phone module


How to Register / Change the Password

Ensure the door is open when registering/changing the password.

1. Open the battery cover and press [Registration] button.



 2. Check whether the lamp on the number pad is lit.



3. Enter new password between 4~12 digits.



4. Press [*] to complete the password registration/change.

 


- Up to 4 passwords can be registered.
- Before the lamp on the number pad goes out, enter the new password and repeat the steps 3 and 4 as above.
- If the password is not entered within 10s after the [Registration] button is pressed, the registration process will be canceled.
- When new passwords are registered, existing passwords will be automatically deleted.

How to Register RFID Cards

Ensure the door is open when registering RFID cards.


1. Open the battery cover and press [Registration] button.



2. Check whether the lamp on the number pad is lit.



 3. Tag the RFID card onto the reader. (Check for a beep sound every time a new RFID card is registered).



4. Press [*] button and when a beep sounds the registration is complete.



- Repeat step 3 before the number pad turns off to add additional RFID cards. (Up to 100 RFID cards can be registered)
- If the RFID card is not tagged within 10s after [Registration] button is pressed, the registration process will be canceled.
- When new RFID cards are registered, pre-registered RFID cards will be automatically deleted.
- Only use the RFID cards provided by Solity.
- Solity will not be held for any responsibility, if there are any problem that might occur by using other RFID cards.

How to Register Fingerprints

Ensure the door is open when registering the fingerprint.

1. Open the battery cover and press [Registration] button.



2. Place your finger on the fingerprint reader and scan again according to the number pad instructions (Total 3 times).



Before the number pad light turns off, repeat the 2nd step to continue registering fingerprints.

3. Press [*] button and when a beep sounds the registration is complete.



- Up to 100 fingerprints can be registered.
- During registration process, existing fingerprints will not be deleted.
- When replacing the fingerprints, please delete all fingerprints first
- Registration will be cancelled if there is no input for 10 secs.
- Injured fingerprints and children's fingerprint might be difficult to register.
- Please keep the fingerprint reader clean at all times.

How to Delete RFID Card/Fingerprint

1. Open the battery cover and press [Registration] button.



2. Press [8] : Delete RFID cards
Press [9] : Delete fingerprint



RFID Card Fingerprint

3. When the Number pad on the body outside of the door is lit, press [#] button for 5 seconds.



5 seconds.



Opening the Door From Outside (With Fingerprint)

Scan the registered fingerprint against the reader.

- Press [#] button before inputting the password to enter silently.



Opening the Door From Outside (With Password)

1. Touch the number pad.
2. Enter 4~12 digits for the password.
3. Press [*] button and it will unlock with a beep sound.



- You can enter random number before or after pressing the password.
- Press [#] button before inputting the password to enter silently.

- If you are worried about exposing your password, please use random number function. (Up to 20 digits can be pressed)
- When wrong password is entered for 5 consecutive times, the lock will not work and sound an alarm for 1 minute.

Opening the Door From Outside (With RFID Card)


| Automatic Detection Mode

Tag the registered RFID card against the reader.



| Manual Detection Mode

Touch the number pad and tag the registered RFID card once it lights up.

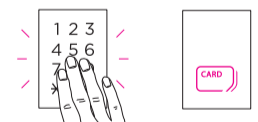

- Press [#] button before scanning the RFID card to enter silently.
- Default setting is Automatic Detection Mode.

Opening the Door from Inside

| Safety Handle Disabled

Press the handle downwards to open the door.



| Safety Handle Enabled

Push the safety button and press the handle downwards to open the door.



- If the door is not opened after unlocking the door, it will automatically re-lock within 7 seconds.


Locking the Door from Outside

Automatic Lock Mode

When the door is closed, it will be automatically locked within 2 seconds.

Manual Lock Mode

Touch the number pad and press [#] button. Then the door will be locked.

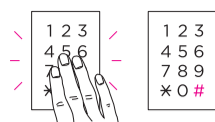

· Default setting is Automatic Lock Mode.

Locking the Door from Inside

Automatic Lock Mode

When the door is closed, it will automatically lock within 2 seconds.

Manual Lock Mode


Press [Close] button on the indoor body in order to lock the door.

CLOSE

How to use the Safety button


How to enable Safety button

Use a hexagon L-wrench and turn the headless bolt on the side of the handle counter clockwise until the safety button pops out.

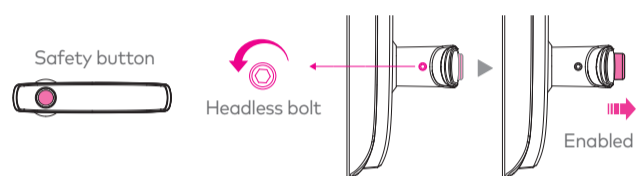


How to disable Safety button

Press the safety button while turning the headless bolt clockwise until it is fully tightened.

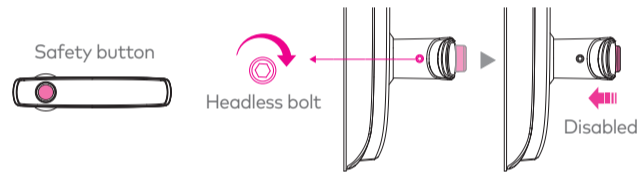

How to Connect BLE module (Optional)


1. Remove the battery cover and detach the module cover.
2. Connect the BLE module into the socket.
3. Install the APP [Smart Solity] on your phone and follow the instructions from it accordingly.

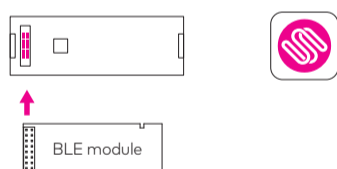

· BLE module has to be separately purchased.
· Please refer to the registration guide provided from the APP.

How to Reset BLE module

 1. Remove the battery cover and press [Registration] button.
2. Press [7].
3. Press [#] for 5 seconds and the BLE module will be initialized with a beep.




5 seconds.

· Use this function when you have lost or changed your phone, and unable to delete through the APP.

How to Connect with the Smart Bridge (Optional)

1. Assemble Smart Bridge with the adapter and plug it into the power outlet.
2. Run [Smart Solity] and select Function settings.
3. Press Connect Smart Bridge and follow the instructions accordingly.

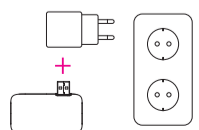

Add with new Smart Bridge

· Plug in Smart Bridge close to the door lock.
· BLE module and Smart Bridge are sold separately.
· Please refer to the Smart Solity APP on how to reset.

Forced Lock Function (Inside Double Lock)

This function prevents opening from the outside with any kind of authentication methods.

How to activate

While the door is locked press [Close] button for 3 seconds until you hear a beep.

CLOSE 3 seconds.

How to deactivate the function

Press down the handle and open the door from the inside, and this function will be deactivated.

Lock status check function

This function is to check whether the door is locked.

How to activate the function

Touch the number pad ⇒ Password ⇒ # ⇒ 2

How to deactivate the function

Touch the number pad ⇒ Password ⇒ # ⇒ 0

· Alarm will go off when the door is not locked.
· Default setting is Lock status check deactivated.

Volume Control

Volume can be adjusted when the door is locked.

To Increase

Touch the number pad ⇒ Password ⇒ # ⇒ 3

To Decrease

Touch the number pad ⇒ Password ⇒ # ⇒ 6

· Volume can be adjusted to 7 levels including mute.

RFID Card Detection

This function will allow to scan the RFID Card Automatic or Manually.

Automatic Detection Mode

Touch the number pad ⇒ Password ⇒ # ⇒ # ⇒ 1

Manual Detection Mode

Touch the number pad ⇒ Password ⇒ # ⇒ # ⇒ 3

· Default setting is Automatic Detection Mode.
· In automatic detection mode, simply tag the RFID card against the reader.
· In manual detection mode, touch the number pad and the scan the RFID card against the reader.

Deadbolt Alarm

While the deadbolt unlocks/locks the door, if it doesn't fully extend or withdraw, an alarm will sound (3 beeps).

· If the alarm doesn't stop or the product does not function properly, re-adjust the position of the lock so there is no interference of the deadbolt.
· Please contact your nearest Customer Service if it repeats often.

Low Battery Alarm

While the lock operates normally but sounds an alarm with the low battery LED notification, the batteries needs to be replaced. Ensure to replace all 8 batteries at once.

 


· When the batteries are flat all of them need to be replaced.
· Do not mix batteries with different manufacturers or brand.

How to use Emergency Battery

When the batteries are completely flat and the lock doesn't function, prepare a 9V battery for emergency entry.

1. Contact 9V battery against the 9V battery outlet.
2. Touch the number pad and then enter the password.
(Touch the number pad only when the number pad is not lit.)
3. Press [*] button and with a beep sound the product will be unlocked.



Break-in Alarm

While the door is locked and if the product senses any sign of abnormal attempts to open it with force, the alarm will go off with the sound reaching 80dB.

How to deactivate the break-in alarm

Remove the batteries, enter password, tag RFID card or scan your fingerprint.

Automatic/Manual Lock Mode

This function will allow to automatically/manually lock the door.

Automatic Lock Mode

Touch the number pad ⇒ Password ⇒ # ⇒ # ⇒ 4

Manual Lock Mode

Touch the number pad ⇒ Password ⇒ # ⇒ # ⇒ 7

· Default setting is Automatic Lock Mode.
· In automatic lock mode, the door will automatically lock within 2 seconds after it is closed.
· In manual lock mode, the door will not lock even if it is closed. You need to either press the [Close] button or touch the number pad and press the [#] button to lock.

Module/Remote Control Setting (Optional)

How to Register

1. Open the battery cover and press [Registration] button.



2. Press [Registration] button on the video door phone module.



Press [Open] button on the remote control.

(up to 5 portable remote controls can be registered)



3. Press [*] button on the number pad to complete.



How to Delete

1. Open the battery cover and press [Registration] button.



2. Press [0] on the number pad.



3. Press [#] button for more than 5 seconds and all the registered information on the remote control will be deleted with a beep sound.



5 seconds.

· To add video door phone module and/or remote controller for registration, repeat #2 before the number pad light goes out (up to 5 can be entered).
· To use video door phone module, purchase a separate module to install.
· When new video door phone module or remote control is registered, existing devices will be automatically deleted.
· When there is no input for 10 seconds during the process, the registration will be canceled.
· In order to use the video door phone module, you also need the receiver module.

High Temperature Alarm

When the lock senses a high temperature (62°C ± 5 °C) with a risk of fire, an alarm will sound in high volume to acknowledge the danger and the door will be automatically unlocked for safe exit

· If the indoor body is exposed to direct sunlight, it may cause the high temperature alarm to go off.
· Even under Forced Lock Mode, the door will automatically unlock.

Prank Alarm and 1-minute Lock Down

When unregistered password, RFID card or fingerprints are entered wrong for 5 consecutive times, the lock will not function for 1 minute with an alarm.

· Try again after the 1 minute lock down has been disabled.

Trouble Shooting

Trouble	Solution
Product does not turn on.	Please check the direction the batteries are inserted and check polarity marking. Please replace all of the batteries (alkaline). Please check the battery status and/or the whether the battery is flat.
Password is not changed.	Touch the [Registration] button with a short beep sound. Refer to How to Register and/or Change password in the user manual.
Door does not open even after entering the password with the [*] button touched.	Check whether the password is entered correctly. If the key pad lights are out while entering the password, the buttons cannot be touched touch the number pad once again to light and then enter the password once again.
Registered information can be verified with the password/RFID cards but the door does not open.	Use 9V emergency battery (square battery) for one more attempt. Locking device may be one of the major causes contact the service center for assistance.
When being used, the product keeps making beeping sounds.	The alarming sound signals battery replacement. When there is the beeping sound, replace all the batteries (alkaline) with new ones.
Door does not lock automatically.	Please reset to auto mode. When the batteries are flat, the product will only make sounds but does not function. Please replace all 4 batteries (alkaline).