


OPERATION MANUAL

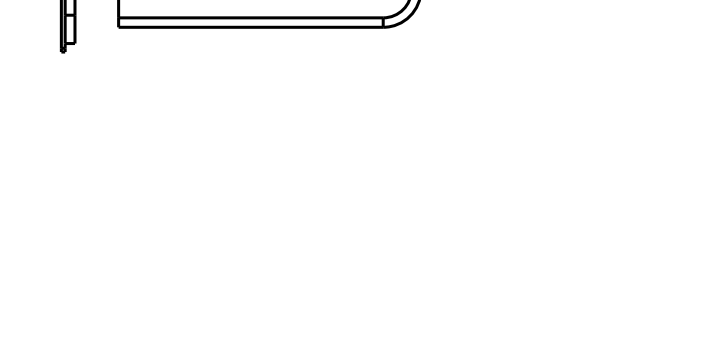

1.Parameters

Cover: 80*54.5*8.5mm
Lever: L150mm / Height: 62mm

Material:
Aluminum alloy+Acrylic

Available Thickness:
12mm ~ 35mm

Unlock Way:
Key/Fingerprint/password/TT-Lock

Power Supply:
4 x AAA Alkaline Batterys

Emergency Supply:
USB(Type-C Interface)

Working Voltage: 6V
Alarm Voltage :4.8V

Capacity:
Fingerprint——50sets
Password——40sets

2.Parts list



3.Overall



1.Front Handle

2.Fingerprint Reader

3.Emergency Power Supply

4.Key Hole

5.Front Cover

6.Silica Gel

7.Screw Bolt

8.Data Line

9.Hollow Square Bar


10.Spring

11.Back Cover


12.Screw

13.Back Handle


4.Installation

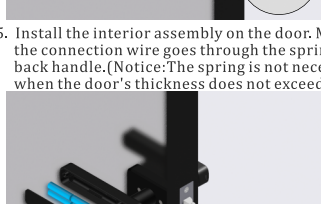

01. Drill holes on the door and install the lock body according to the drawings

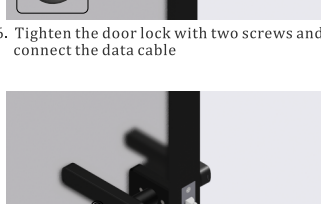


02. Install the two screw bolts on the front cover, Insert the hollow square bar into the bottom of the front lever and let the data line stick out

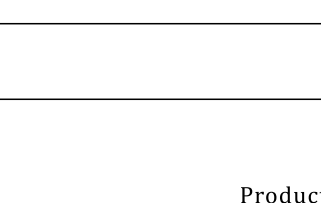


03. ①Rotate the bar to the bottom towards the handle direction.
②Then rotate back 90° to complete the positioning




04. Insert the exterior assembly into the door hole

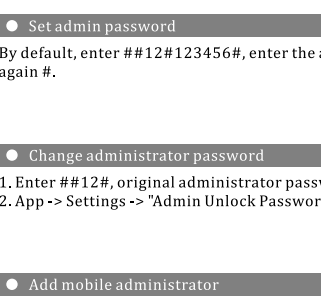


05. Install the interior assembly on the door. Make sure the connection wire goes through the spring and the back handle. (Notice: The spring is not necessary when the door's thickness does not exceed 45MM)

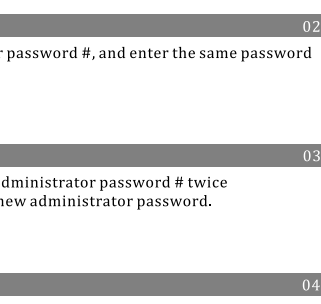

06. Tighten the door lock with two screws and connect the data cable

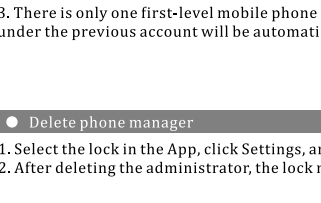

07. Install 4 AAA alkaline batteries and the battery cover to complete the installation

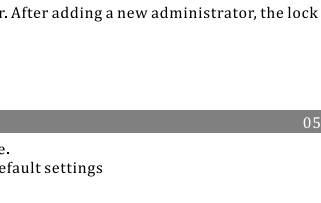

08. As shown in the picture, press down to open the battery cover

Product function settings

● Restore default settings

01

Turn the key 90°, the system prompts to restore the factory settings, enter 000#

● Set admin password

02

By default, enter ##12#123456#, enter the administrator password #, and enter the same password again #.

● Change administrator password

03

1. Enter ##12#, original administrator password #, new administrator password # twice
2. App-> Settings -> "Admin Unlock Password" -> Enter a new administrator password.

● Add mobile administrator

04

1. 1. Wake up the door lock, open the APP, and hear a long "beep..." success.
2. Enter ##83#admin password# on the lock to allow other App accounts to add this lock and become a new administrator.
3. There is only one first-level mobile phone administrator. After adding a new administrator, the lock under the previous account will be automatically deleted

● Delete phone manager

05

1. Select the lock in the App, click Settings, and click Delete.
2. After deleting the administrator, the lock restores the default settings

● Add fingerprint

06

1. Click "Fingerprint" on the App -> Add Fingerprint -> Enter the fingerprint name and validity period -> Click Next -> Click Start Adding
2. Enter ##85#admin password#, after hearing two beeps, start adding.
3. It can be managed after uploading to the app through the "upload fingerprint in the lock" function.
4. After successfully adding fingerprints on the lock, you can continue to add or exit after timeout.

● Delete fingerprint

07

1. Click the fingerprint on the app -> click the fingerprint to be deleted -> click delete.
2. Enter ##70#admin password# on the lock to delete all fingerprints.

● Rename fingerprint

08

Click "Fingerprint" on the App -> click the fingerprint to be renamed -> click the name -> enter a new name.

● Modify the fingerprint validity period

09

1. Click "Fingerprint" on the App -> Rotate Fingerprint -> Click Validity Period -> Enter a new validity period.
2. After setting the valid period, the fingerprint can only be unlocked within the specified valid period.

● Add password

10

1. Enter ##85# -> Enter the administrator password# -> Enter the password to be added # 2 times
2. In the App's password management -> upload lock password, upload the password to the App for management.
3. After the password is added successfully, you can continue to add, or you can press * key or timeout to exit.
4. App-> Click "Get Password" -> Select Custom -> Select Validity Period -> Click Set Password -> Enter the password.
5. Click "Get Password" on the App -> select the password type: permanent/period/single/clear/cycle -> click Get Password
6. Empty password is used to delete all passwords that have taken effect on the lock

● Delete password

11

1. Enter ##71#admin password# to delete all passwords except the administrator
2. Click "Password Management" on the App -> click the password to be deleted -> click Delete.

● Change Password

12

Click "Password Management" on the App -> click Password -> enter a new password.

● Rename password

13

Click "Password Management" on the app -> click password -> click name -> enter a new name.

● Modify password validity period

14

Click "Password Management" on the App -> click password -> click validity period -> enter a new one.

● Unlock

15

1. Click the lock icon on the App to unlock it. The lock must be unlocked on the lock edge, or it can be unlocked remotely through the gateway.
2. Fingerprint unlock: Press the added finger on the fingerprint collector to unlock.
3. Password unlock: Input the unlock password on the password keyboard and press # to unlock.
4. Only after using an unauthorized fingerprint, the touchpad can be woken up.
5. When no administrator is added, the default unlock password is "123456".

● Lock

16

After unlocking, it will automatically lock after 5 seconds timeout.

● App key

17

Click "Send Key" on the App, and through authorization, can become a secondary administrator.

● View unlock records

18

1. Select the door lock on the App, and click the operation record to view it
2. When there is no gateway, you need to unlock it through the App before you can view it.

● Dummy password

19

Other numbers can be added before and after the password, and the length is 16 digits.

● Wrong password input protection

20

If the unlock password is entered incorrectly 5 times in a row, the system will be locked for 5 minutes. During the lock period, the correct fingerprint and App unlock can unlock the keyboard lock state.

● Firmware upgrade

21

Click Settings->Lock Upgrade on the App to upgrade the new firmware of the lock.

● Silent mode

23

After the App turns on the silent mode, the screen will flicker when you touch the button.



TT-Lock APP

Scan code to download TTLock detailed instructions for use

